

PART NO: ABSHS-02

06-10 DODGE CHARGER HOOD SCOOP

PLEASE READ THESE INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

Important Note: Please inspect your hood scoop for proper fit before painting or mounting

Installation Instructions

Hardware Kit (Supplied on each hood scoop)

NIL

Tools Required:-

- Isopropyl alcohol or equivalent / Tissue Paper or Soft Cloth / Marker Pen

This Dodge Charger hood scoop kit is made from high quality ABS plastic. This product is produced by blow molding process with grille produced by high pressure injection.

Hood Scoop Installation:-

Step 1

1. Clean surface area that is to be covered by the hood scoop with isopropyl alcohol or equivalent.

Step 2

2. Set the hood scoop on the center line of the hood, the recommended distance between the hood scoop edge and hood edge is about 4 7/8". Mark the position of the hood scoop.

Step 3

3. Peel the tape backing at all corners (A to F) (illustration 1) and place the hood scoop on the marked position.

Step 4

4. Peel the tape backing completely and press the hood scoop gently onto the hood.


Step 5

5. Peel the tape backing of the grill and install it into the grill cavity of the hood scoop. (illustration 2)


Step 6

Hood scoop with grill installed. (illustration 3)

1)

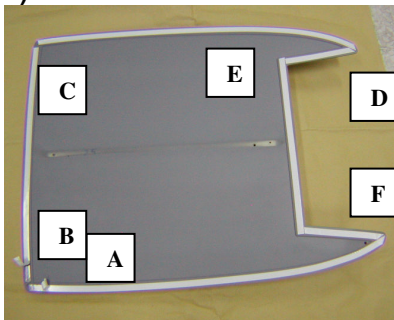

2)

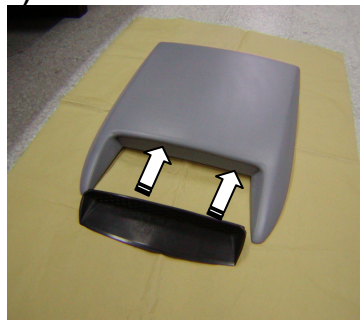

3)

