

PART NO: ABSHS-06

15UP FORD MUSTANG HOOD SCOOP

PLEASE READ THESE INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

Important Note: Please inspect your hood scoop for proper fit before painting or mounting

Installation Instructions

Hardware Kit (Supplied on each hood scoop)

1. Locators = 2 pcs 2. Washers = 4 pcs 3. Screws & Nuts = 4 sets 4. Square Foam Tape = 4 pcs

Tools Required:-

- Isopropyl alcohol or equivalent / Phillips Screwdriver / Masking Tape / Vacuum Cleaner / Centre Punch / Hand Drill / Drill Bits : 3/16" / Hammer

Hood Scoop Installation:-

Step 1

1. Clean surface area that is to be covered by the hood scoop with isopropyl alcohol or equivalent.

Step 2

2. Remove the trim underneath the hood. Note: - Set the trim aside as it is to be re-attached to the vehicle after the installation of the hood scoop

Step 3

3. Peel the tape backing of the locator strip and attach it to the mounting holes of the hood scoop (illustration 1)

Step 4

4. Set the hood scoop on the center line of the hood.

Step 5

5. Tape the locator strips on the hood, carefully remove the hood scoop leaving the locator strips.

Step 6

6. Center punch the holes for drilling. Drill 3/16" holes on the two punch mark locations. Use minimum pressure when drilling to avoid denting of hood

Step 7

7. Peel the tape backing at the corner (illustration 2) and tighten the four screws.


Step 8

8. Peel the tape backing completely and press the hood scoop gently onto the hood.


Step 9

9. Peel the tape backing of the grill. Hood Scoop with grill installed (illustration 3)

1)

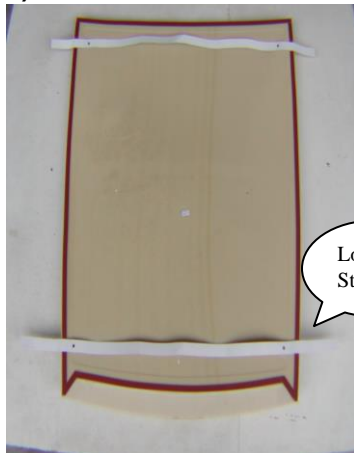

2)

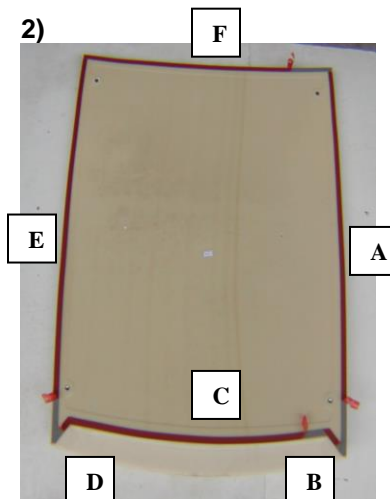

3)

