

MODEL NO : ABS243A

DODGE CHALLENGER REAR SPOILER

PLEASE READ THESE INSTRUCTION CAREFULLY PRIOR TO INSTALLATION

Important Note: Please inspect your spoiler for proper fit before painting or mounting

Installation Instructions

Hardware Kit (Supplied on each spoiler)

- | | | |
|----------------------|-----------------------------|----------------------|
| 1. Locator = 5 pcs | 3. M6 Plastic Studs = 3 pcs | 5. Washers = 2 pcs |
| 2. M6 Screws = 2 pcs | 4. Plastic Grommets = 3 pcs | 6. Foam Tape = 2 pcs |

Tools Required :-

- Isopropyl alcohol or equivalent / Phillips Screwdriver / Masking Tape / Vacuum Cleaner / Centre Punch / Hand Drill / Drill Bits : 3mm, 8mm, 12mm / Hammer

General Instructions :-

- a) Use protective covers to avoid damage to vehicle
- b) Clean the mounting areas and dry thoroughly


Spoiler Installation :-

1. Stick the locators on the 5 mounting holes
2. Place the spoiler on the correct position of the truck lid (illustration 1) and secure both ends of locators with masking tape. Carefully lift the spoiler off the trunk lid leaving the locator strips (illustration 2).
3. Drill 3mm pilot holes at five (5) punch mark locations.
4. Drill 8mm holes at points A and 12mm holes at points B on the trunk lid (illustration 3).
5. Tighten the three M6 plastic studs at points B and insert the plastic grommets into the 12mm holes.
6. Peel the tape backing at the corners (illustration 4) and gently press the three M6 plastic studs into the plastic grommets.
7. Peel the tape backing completely and tighten the two M6 screws.


1)



2)

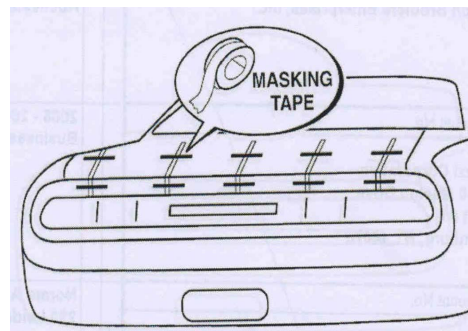

3)

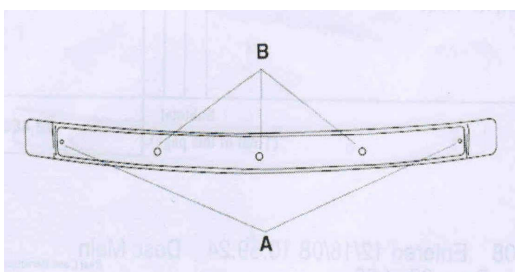

4)

